

T 8313 EN

Type 3372 Electropneumatic Actuator

**Application**

Electropneumatic linear actuators for attachment to Type 3214 and Type 3260 Valves as well as Series V2001 Valves

Rated travel	15 and 30 mm
Actuator area	120 and 350 cm²

The Type 3372 Electropneumatic Actuator is available in the following versions:

- Version **with Type 3725 Positioner (direct attachment)**, **120 cm²** actuator area and 15 mm rated travel (Fig. 1)
- Version **with Type 3725 Positioner (direct attachment)**, **350 cm²** actuator area and 15 or 30 mm rated travel (Fig. 2)

The actuators are suitable for attachment to Series V2001 Valves (e.g. Type 3321, Type 3323, Type 3531, Type 3535) as well as Type 3214 and Type 3260 Valves. The actuators mainly consist of two diaphragm cases, a rolling diaphragm and internal springs. For throttling service, a Type 3725 Positioner is mounted to the rod-type yoke using a support element.

Further versions

- **Permissible operating temperatures from -35 to +90 °C**
- Version **ready for the attachment of a Series 3730 Positioner**, 120 cm² actuator area and 15 mm rated travel or 350 cm² actuator area and 15 or 30 mm rated travel
- **Explosion protection** for a mounted Type 3725 or Series 3730 Positioner according to the documentation of the positioner used (see Table 1.2)

Accessories

- **Type 4744-2 Limit Switch** (Fig. 3) · With explosion protection and degree of protection according to the documentation of the limit switch (see Table 1.2) · Clamping plate can be used to mount it · See Data Sheet ▶ T 8367

Fig. 1: Type 3372 Actuator · 120 cm² actuator area · With Type 3725 Positioner (direct attachment)



Fig. 2: Type 3372 Actuator · 350 cm² actuator area · With Type 3725 Positioner (direct attachment)



Fig. 3: Type 3372 Actuator (120 cm²) with additional Type 4744-2 Limit Switch

Principle of operation

The positioner mounted on the Type 3372 Electropneumatic Actuator ensures a predetermined assignment of the valve position (controlled variable x) to the input signal (reference variable w). It compares the input signal received from a control system to the travel of the valve and issues a corresponding output signal pressure p_{st} (output variable y) for the actuator. The signal pressure p_{st} creates the force $F = p_{st} \cdot A$ at the diaphragm surface A which is opposed by the springs (10) in the actuator. The bench range is determined by the number of springs used and their compression, taking into account the rated travel. The travel H is proportional to the signal pressure p_{st} . The direction of action of the actuator stem (7) depends on how the springs are installed in the actuator and the location of the signal pressure connection (S).

Further details on the principle of operation of the positioner:

- Type 3725 (Data Sheet ► T 8394)
- More details on Series 3730 in Data Sheets ► T 8384-X and ► T 8484-X.

Tight-closing function

The electropneumatic actuator is completely filled with air or vented as soon as the reference variable falls below or exceeds a certain value.

Actuator stem extends (FA)

When the reference variable falls below the switching point of 4.08 mA, the actuator is fully vented. This causes a mounted globe valve to close. In three-way valves, port **B** is closed when the valve is used for mixing service and port **A** is closed when the valve is used for diverting service.

Actuator stem retracts (FE)

When the reference variable exceeds the switching point of 19.95 mA, the actuator is filled with air. This causes a mounted globe valve to close. In three-way valves, port **A** is closed when the valve is used for mixing service and port **B** is closed when the valve is used for diverting service.

Fig. 4: Type 3372 Electropneumatic Actuator with 120 cm² actuator area for the direct attachment of a Type 3725 Positioner

Fig. 5: Type 3372 Electropneumatic Actuator with 350 cm² actuator area for the direct attachment of a Type 3725 Positioner

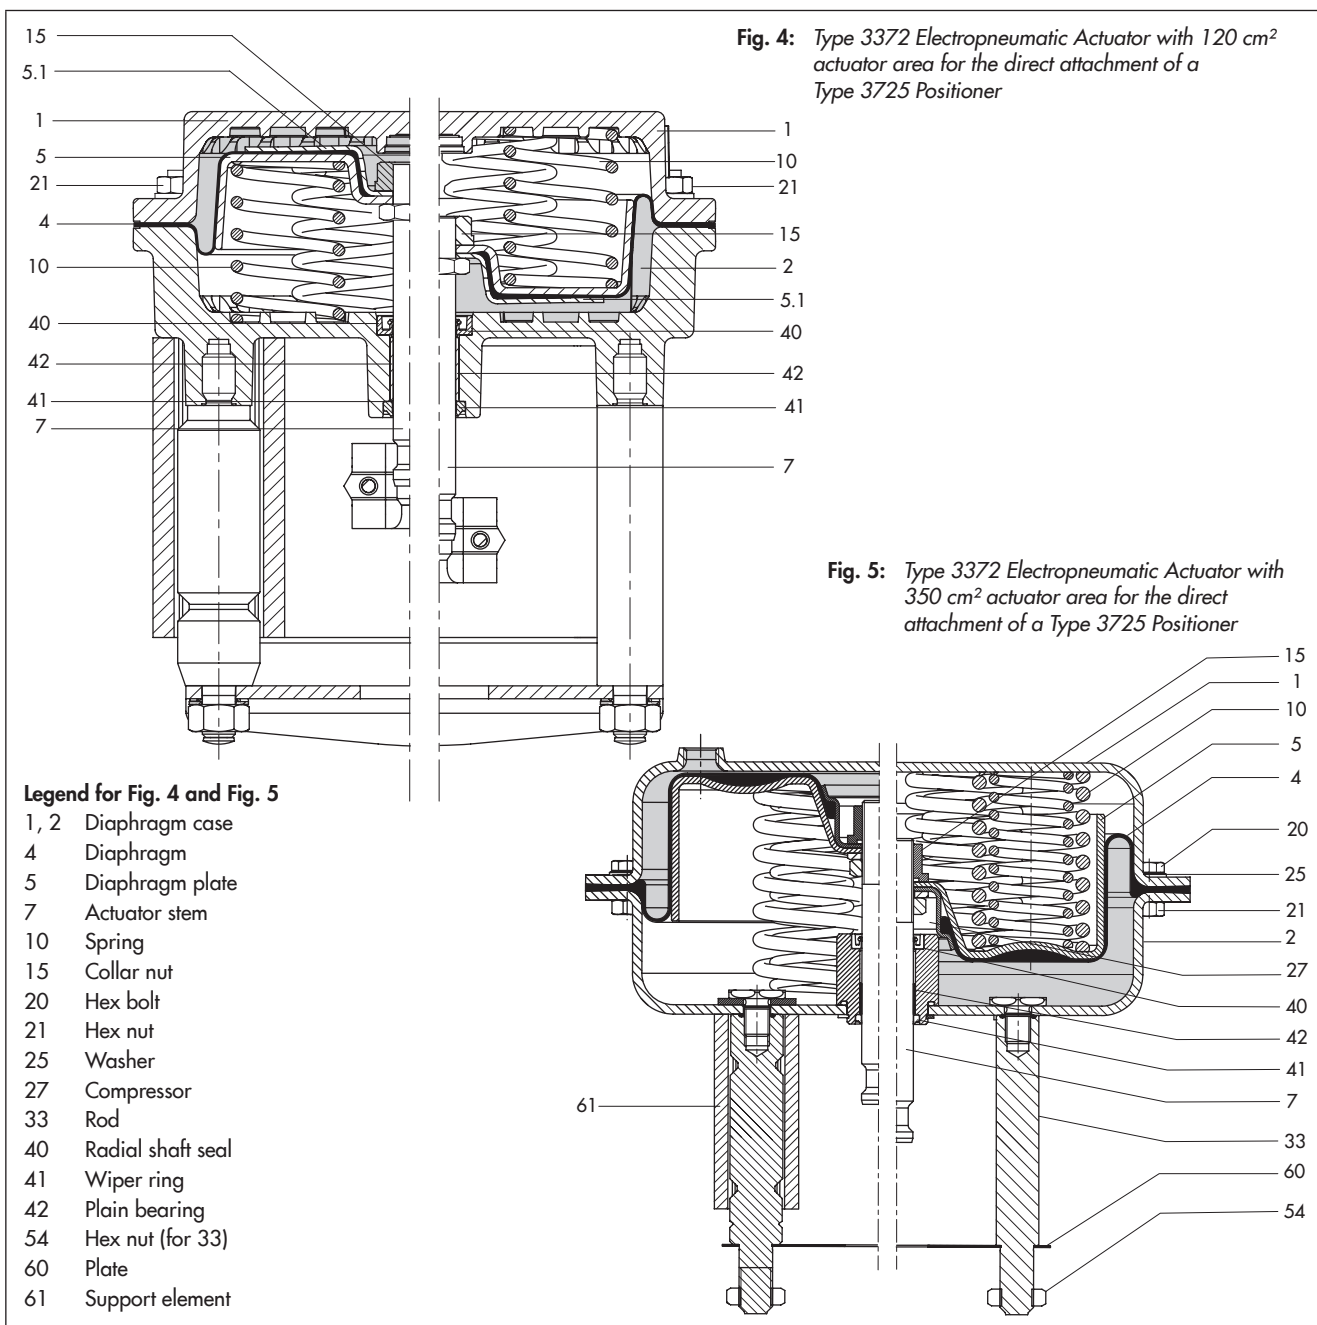


Table 1: Technical data**Table 1.1: Electric data of Type 3372**

Type 3372 with directly attached Type 3725 Positioner ¹⁾			
Actuator area	120 cm ²	350 cm ²	
Rated travel	15 mm	15 mm	30 mm
Function (mounted device)	Electropneumatic positioner with self-calibrating, automatic adaptation to valve and actuator		
Reference variable	4 to 20 mA (reverse polarity protection)		
Split-range operation	4 to 11.9 mA and 12.1 to 20 mA		
Static destruction limit	±33 V		
Minimum current	3.8 mA		
Load impedance	Max. 6.3 V		
Span adjustment	Self-adjusting		
Direction of action	Adjustable: increasing/increasing or increasing/decreasing		
Tight-closing function	w < 1 % and w > 99 %		
Operation	Can be individually activated or deactivated using capacitive keys (P9 or P10)		
Hysteresis	≤0.3 %		
Variable position	-		
Switching accuracy	-		
Air consumption in steady state	≤100 l _n /h with a supply pressure up to 6 bar and a signal pressure of 0.6 bar		
Air output capacity	Actuator (supply)	At Δp = 6 bar: 8.5 m _n ³ /h At Δp = 1.4 bar: 3.0 m _n ³ /h K _{Vmax} (20 °C) = 0.09	
	Actuator (exhaust)	At Δp = 6 bar: 14.0 m _n ³ /h At Δp = 1.4 bar: 4.5 m _n ³ /h K _{Vmax} (20 °C) = 0.15	
Temperature range ²⁾	-25 to +80 °C ³⁾		
Degree of protection	IP 66 ⁴⁾		
Electropneumatic or pneumatic connection	Separate from actuator (in the positioner)		
Electromagnetic compatibility	Complying with EN 61000-6-2, EN 61000-6-3 and NAMUR Recommendation NE 21		
Reading	With LEDs		
Initialization	Automatic		
Operation	Using capacitive keys		
Zero calibration	Automatic (activated by P15 or P16)		
Associated documentation	▶ EB 8313-3, ▶ EB 8394 or ▶ T 8394		

¹⁾ Versions with Type 3730-x or Type 3731-x Positioner on request

²⁾ Observe temperature range of mounted devices (positioner etc.).

³⁾ -35 to +90 °C with Type 373x-x Positioner and metal cable glands

⁴⁾ Other ratings possible when a Type 373x-x Positioner is mounted. See corresponding mounting and operating instructions

Table 1.2: Explosion protection certificates for Type 3372 in combination with a positioner and any optionally mounted limit switch

The listed technical data for actuators used in hazardous areas may be further restricted by the limits specified in the test certificates of the positioner and any optionally mounted limit switch.

See documentation of the positioner used and any optionally mounted limit switch for the explosion protection certificates.

Mounted device	See the mounting and operating instructions for explosion protection certificates
Type 3725 Positioner	▶ EB 8394
Type 3730-0 Positioner	▶ EB 8384-0
Type 3730-4 Positioner	▶ EB 8384-4
Type 3730-5 Positioner	▶ EB 8384-5
Type 3730-6 Positioner	▶ EB 8384-6
TROVIS SAFE 3730-6 Positioner	▶ EB 8384-6S
TROVIS 3730-1 Positioner	▶ EB 8484-1
TROVIS 3730-3 Positioner	▶ EB 8484-3
Type 4744 Limit Switch	▶ EB 8367

Table 1.3: Further technical data for Type 3372

Type 3372 with directly attached Type 3725 Positioner								
Actuator area	120 cm ²				350 cm ²			
Rated travel	15 mm				15 mm	30 mm		
Pneumatic data								
Tight-closing function	Stem retracts (FE)	Stem retracts (FE)	Stem extends (FA)	Stem extends (FA)	Stem retracts (FE)	Stem extends (FA)	Stem retracts (FE)	Stem extends (FA)
Bench range	0.4...1.4	1.4 to 2.3		2.1 to 3.3	1.5 to 2.1	2.1 to 2.7	1.5 to 2.7	2.2 to 3.8
Supply pressure	Max. 6 bar ¹⁾				Max. 6 bar			
Materials								
Actuator housing	Aluminum, powder coating				1.0332			
Diaphragm	NBR				NBR			
Actuator stem	1.4305				1.4401/1.4404			
Weight (without positioner)								
kg (approx.)	3.3				15			
Attachment								
	Form B or Form C (see Table 2)				Form C			
Conformity								
CE								

¹⁾ With "actuator stem extends" fail-safe action, the supply pressure must not exceed the upper bench range value by more than 1.5 bar.

Table 1.4: Technical data of Type 4744-2 Limit Switch

Type 4744-2 Limit Switch	
Travel range	15 mm
Permissible load	AC voltage: 250 V/5 A DC voltage: 250 V/0.4 A
Temperature range	-20 to +60 °C
Degree of protection	IP 66
Explosion protection	Flameproof enclosure II 2G Ex db IIC T6-T5
Approx. weight	0.4 kg
Associated documentation	▶ T 8367

Mounting types

There are two types of mounting depending on the valve/actuator combination: mounting using a crossbeam or rods.

When the actuator is mounted to the valve using a crossbeam (form B, Fig. 6), the actuator is fastened to the valve bonnet using a central nut.

When the actuator is mounted using rods (form C, Fig. 7 and Fig. 8), the actuator is connected to the valve bonnet using rods. In this case, a crossbeam is not required for mounting the actuator.

Table 2: Mounting types (see Fig. 6, Fig. 7 and Fig. 8)

Type 3372 Actuator with Type 3725 Positioner (direct attachment)	Actuator area	120 cm ²	350 cm ²	
	Travel	15 mm	15 mm	30 mm
Type ... Valve	Nominal size DN			
3321	15 to 50	Form B	–	–
3321	65 to 100	Form C	Form C	–
3321	100	–	–	Form C
3323	15 to 50	Form B	–	–
3323	65 to 80	Form C	Form C	–
3323	100	–	–	Form C
3531	15 to 80	Form B	–	–
3535	15 to 80	Form B	–	–
3214	65 to 100	Form B	–	–
3214	125 to 250	–	–	On request
3260	65 to 80	Form B	–	–
3260	100 to 150	–	–	Form B


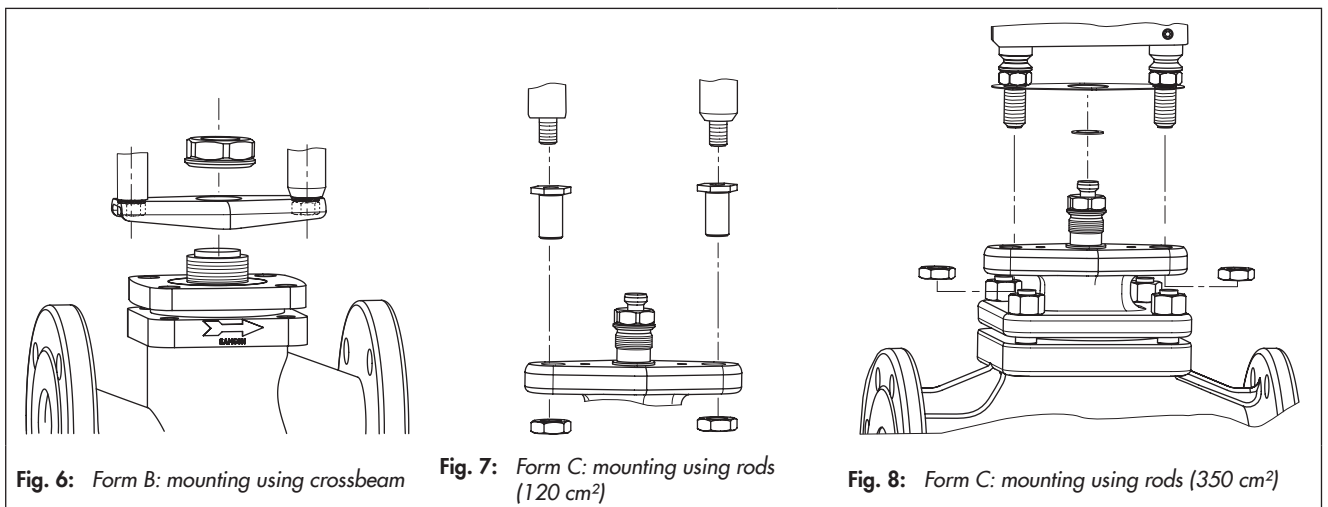



Table 3: Bench ranges of Type 3372 Actuator

Actuator area [cm ²]	Rated travel [mm]	Travel volume at rated travel [cm ³]	Bench range [bar] (signal pressure range at rated travel)	Additional possible spring compression	No. of springs	Fail-safe action: actuator stem extends (FA)		Fail-safe action: actuator stem retracts (FE)				
						Spring force at 0 mm travel [kN]	Spring force at rated travel [kN]	Spring force [kN] at rated travel and supply pressure [bar] of				
								2	3	4	5	6
120	15	1800	0.4 to 1.4	-	4	0.5	1.7	0.7	1.9	3.1	-	-
		1800	1.4 to 2.3		8	1.7	2.8	-	0.8	2	3.2	4.4
		1800	2.1 to 3.3		12	2.5	4.0	-	-	-	-	-
350	15	5250	1.5 to 2.1	-	8	-	-	-	3.15	6.65	6.65	6.65
		5250	2.1 to 2.7		6	7.35	9.5	-	-	-	-	-
	30	10500	1.5 to 2.7		8	-	-	-	1.05	4.55	8.05	11.55
		10500	2.2 to 3.8		12	7.7	13	-	-	-	-	-

Dimension diagrams - All dimensions in mm

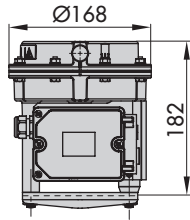

120 cm² actuator area
(actuator stem retracts/extends)

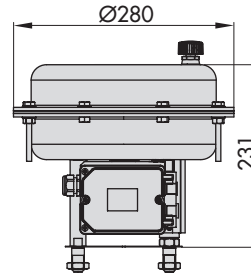

350 cm² actuator area
(actuator stem retracts/extends)